

Lyrik



Lyrik™ Portable Wireless Sound System

Lyrik™ Portable Sound System User Guide is available online at:
www.gofrontrow.com/support/user-guides/lyrik-user-guide/

The Lyrik™ portable amplification system has an integrated rechargeable battery for use inside and outside the classroom. The lightweight and comfortable teacher microphone provides voice amplification and the tower can be connected to a computer or other auxillary audio source either directly using cables or wirelessly using Bluetooth®; to play music, audio from video sources or even integrate with video conferencing programs. Use Bluetooth to connect wirelessly. Turn PrioriTeach on to automatically mute the auxillary audio when speaking.

1 Charge Microphones and Tower

Before getting started, fully charge microphones and tower.

(NOTE: This can take up to 8 hours):

Microphones

- Connect power supply to charger.
- Place microphones into charger.
- a. Steady green light indicates a full charge.

Tower

- Connect power supply to tower.
- b. Steady green "**FULL**" light indicates a full charge.

2 Set Tower controls and turn Tower on

- c. Turn tower on using rocker switch above power connection.
- d. Set **Channel A** to 7. If using a student mic or second mic:
Set **Channel B** to 7 (otherwise leave off).
Set **AUX** to 5.
Set **MASTER** to 2 or whatever is comfortable for the room.
- e. Set **TREBLE** and **BASS** to +4 (2 dots right of center).

3 Set Channels (if required)

There are 96 available channels. The Tower channel and Microphone channel must match (e.g., Teacher Mic set to CH01, Tower CH. A set to CH01). If using a second microphone, it must be on a different channel (e.g., Teacher Mic/Tower CH.A set to CH01, Student Mic/Tower CH. B set to CH02). Do not use the same channels for classrooms within 200ft (61m) of each other. If you experience static or interference on a channel, switch to another channel.

Microphones

- f. Press and hold power button for 0.5 second to power on and 2 seconds to power off.
- g. Press and hold **SET** (or channel control) button for 2 seconds until channel number flashes.
- h. Press **-** or **+** button to select channel. Press **SET** button to lock in channel.

Tower

- i. Press and hold the **SET** button for 2 seconds until channel A number flashes.
Press **SET** again to set channel B.
- j. Press the ▲ (Up) or ▼ (Down) buttons to select channel. Press **SET** button to lock in channel.

4 Connect AUX AUDIO

- k. For Bluetooth, press **Bluetooth** pairing button and search for "frontrow" followed by 3 digits on your device. The blue LED on the front will light up when a device is paired.
- l. For direct connect, plug a 3.5mm audio cable into the **AUX IN** jack.

QUICK SETUP

Mic
Charger

a



Tower
Speaker



Teacher
Microphone



Student
Microphone



USING YOUR LYRIK

- Turn Tower on.
- Place Teacher Mic around neck.
Distance from mouth to top of microphone should be around 6 – 8" (150 – 200mm).
- Volume button on Teacher Mic has three settings (Low, Med, High).
It adjusts Teacher Mic volume only.
It does not adjust **MASTER** or **AUX AUDIO** volume.
- Turn on PrioriTeach when you want voice to override any audio playing from Bluetooth or the AUX input, anytime you speak.



Student Mic



Charger Troubleshooting

- To maximize battery life, recharge after every use and fully charge every 3 months when not in use.

Charging indicator flashes RED

- Check if the microphones are seated correctly.
- Check if batteries in the microphone are rechargeable.
- Ensure microphone has been charged for over 7 hours.

Charging indicator is OFF

- Check if power supply is plugged in the socket.
- Check if batteries are correctly installed in the microphone.
- Check if charging contacts on both charger and the microphones are covered with dirty or corroded.

Learn more at www.boxlight.com